

MACRO-LOCK POST™ X-RO® Step by Step

ILLUSION™




1 Universal Drill



2 Finishing Drill



3 Cut / Clean

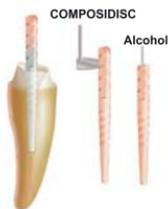

4 Etch / Rinse / Gently dry



5 Prime / Remove Excess



6 Prime / Coronal area



7 Prime / Light cure



8 Light cure




9 Dual cure cement



10 Seat post light cure



11 Core build up

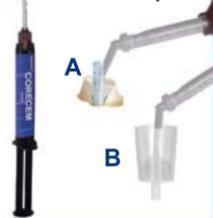

12 Crown preparation

